

Audio/Visual Classroom Upgrades

Zollinger Library - **102, 103, 119, 123**

Gurley Hall - **1239, 1234**

Career Tech Education - **1305, 1317, 1326, 1328B, 1310**

Calvin Hall Center - **174, 171, 176, 173, 175, 177, 179, 269, 273, 274, 229, 220, 221, (Tier 3 - 261, 266, 268) (Tier 4 - 182, 184)**

Health Careers Center - **103, 117 (Tier 4 - 133, 109, 105)**

Student Services Technology Center – **Tier 4 - 108, 162, 172, 182**

<https://www.gallup.unm.edu/assets/pdf/quick-guide-av-tiers.pdf>

Tier 1 - Small Classroom

Simplified controls – there are no options on the top of the display.

- Bottom right button is on and off control, lowers the screen and turns on the projector. Press again, the screen retracts and the projector turns off.
 - Some rooms have manual screen controls if you need to operate the screen independent of the projector,
- Bottom left icon mutes the audio, - and + are for volume control.
 - Volume and mute can also be done from the computer.



Tier 3 – Medium Classroom

Desktop Touchscreen input

There is a separate wall mount connection for HDMI to your computer.

- **Press green button on the display to turn on the projector and lower the screen.**
- **Press the red button on the display to turn off the projector and raise the screen.**
- **Volume and Mute controls on bottom of display.**



Tier 4 – Medium Classroom with Web Conferencing

Desktop Touchscreen input

Connections available for HDMI – Blu-ray – Elmo Camera and Mic control via USB connection.

- **Press green button on the display to turn on the projector and lower the screen.**
- **Press the red button on the display to turn off the projector and raise the screen.**
- **Camera – Temporarily controlled via handheld remote.**
- **Volume and Mute controls on bottom of display.**



Calvin Hall 182 and 184 –

Camera and Mic only function on room workstation.

Tier 4 – Medium Classroom with Web Conferencing

Desktop Touchscreen input

**Connections available for HDMI – Blu-ray – Elmo
Camera and Mic control via USB connection.**

- **Press green button on the display to turn on the projector and lower the screen.**
- **Press the red button on the display to turn off the projector and raise the screen.**
- **Camera – Temporarily controlled via handheld remote.**
- **Volume and Mute controls on bottom of display.**

